


EverGuard®  
TPO Drain Retrofit/Insert  
MA/FA/BA 521B

Diagram

Updated: 4/09



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

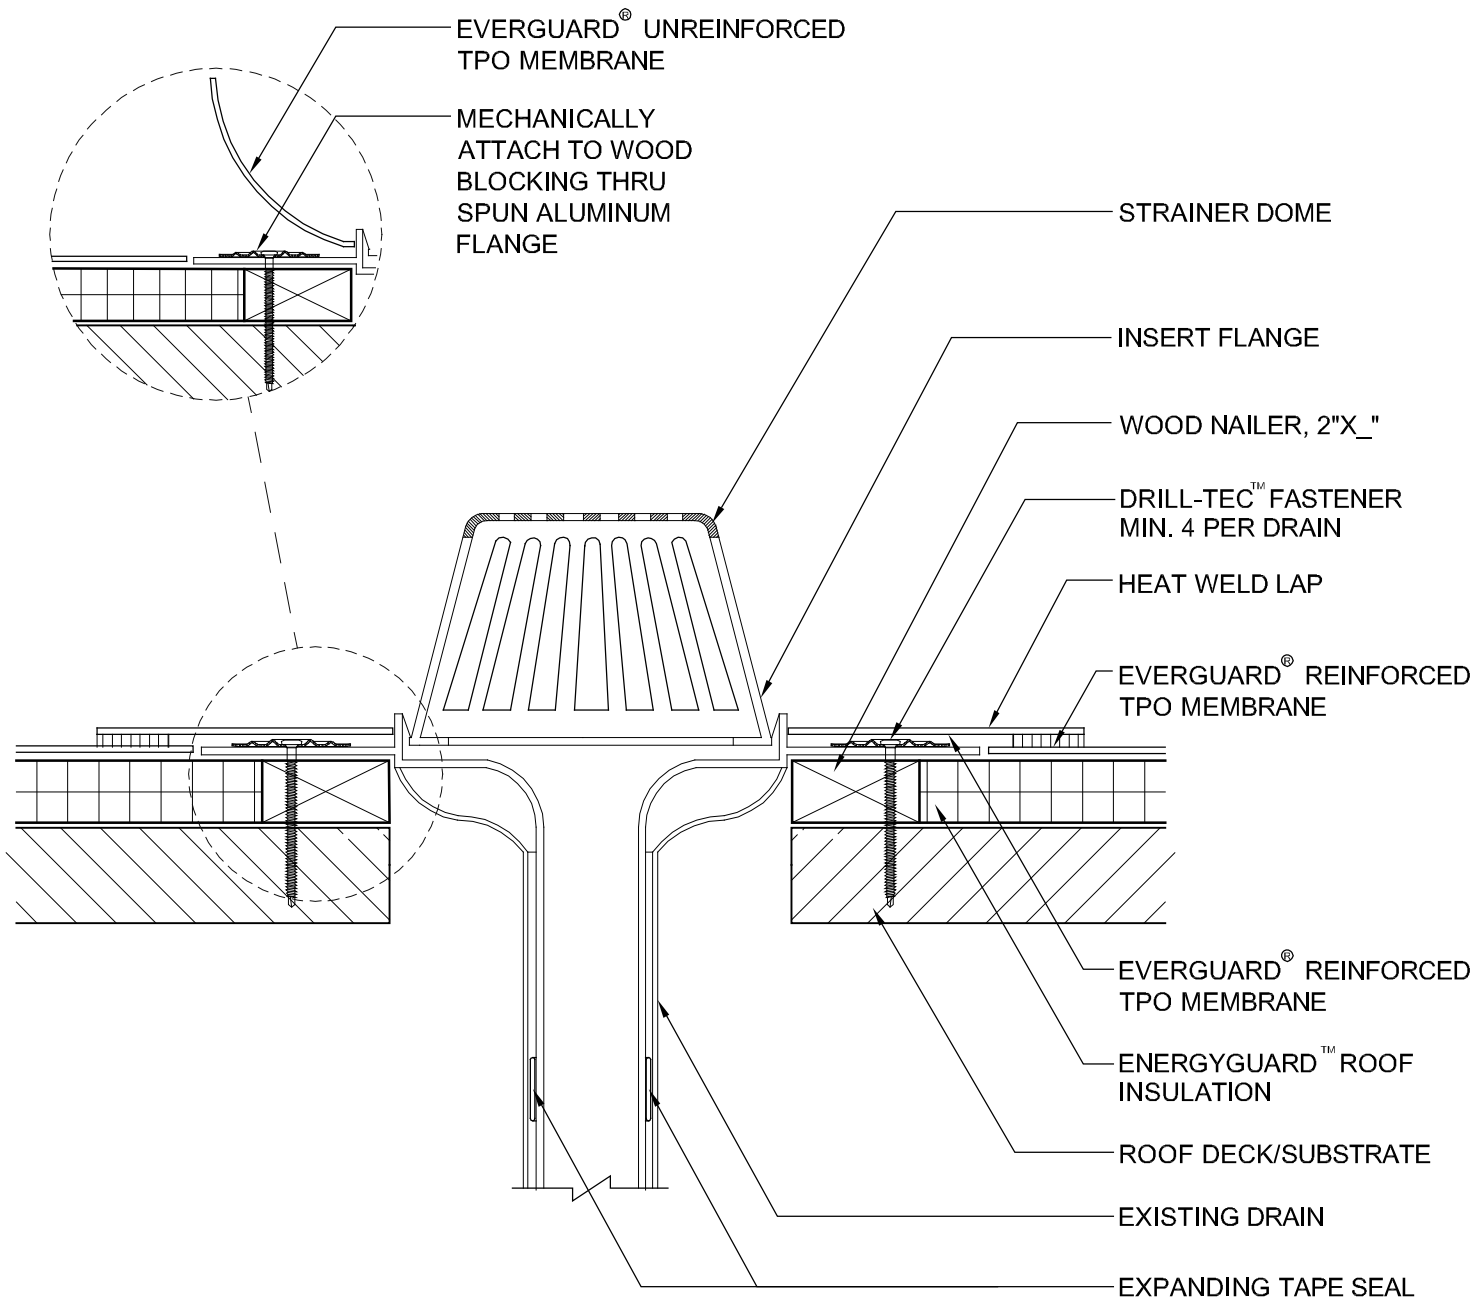

**NOTE:**

1. STONE/PAVER BALLAST (NOT SHOWN) REQUIRED FOR BA SYSTEMS.
2. DRAIN PIPE SHALL BE CLEANED SO THAT EXPANDING TAPE SEAL CAN SEAT COMPLETELY AGAINST DRAIN PIPE AFTER RELEASE PAPER HAS BEEN REMOVED.
3. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES ( REFER TO DETAIL MA/FA/BA 115 ).



ROOF PENETRATION SERIES

**TPO DRAIN - RETROFIT / INSERT**

DRAWING #

521

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

4-01-09