


EverGuard®  
Premolded Penetration Flashing  
MA/FA/BA 506B

Diagram

Updated: 4/09



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

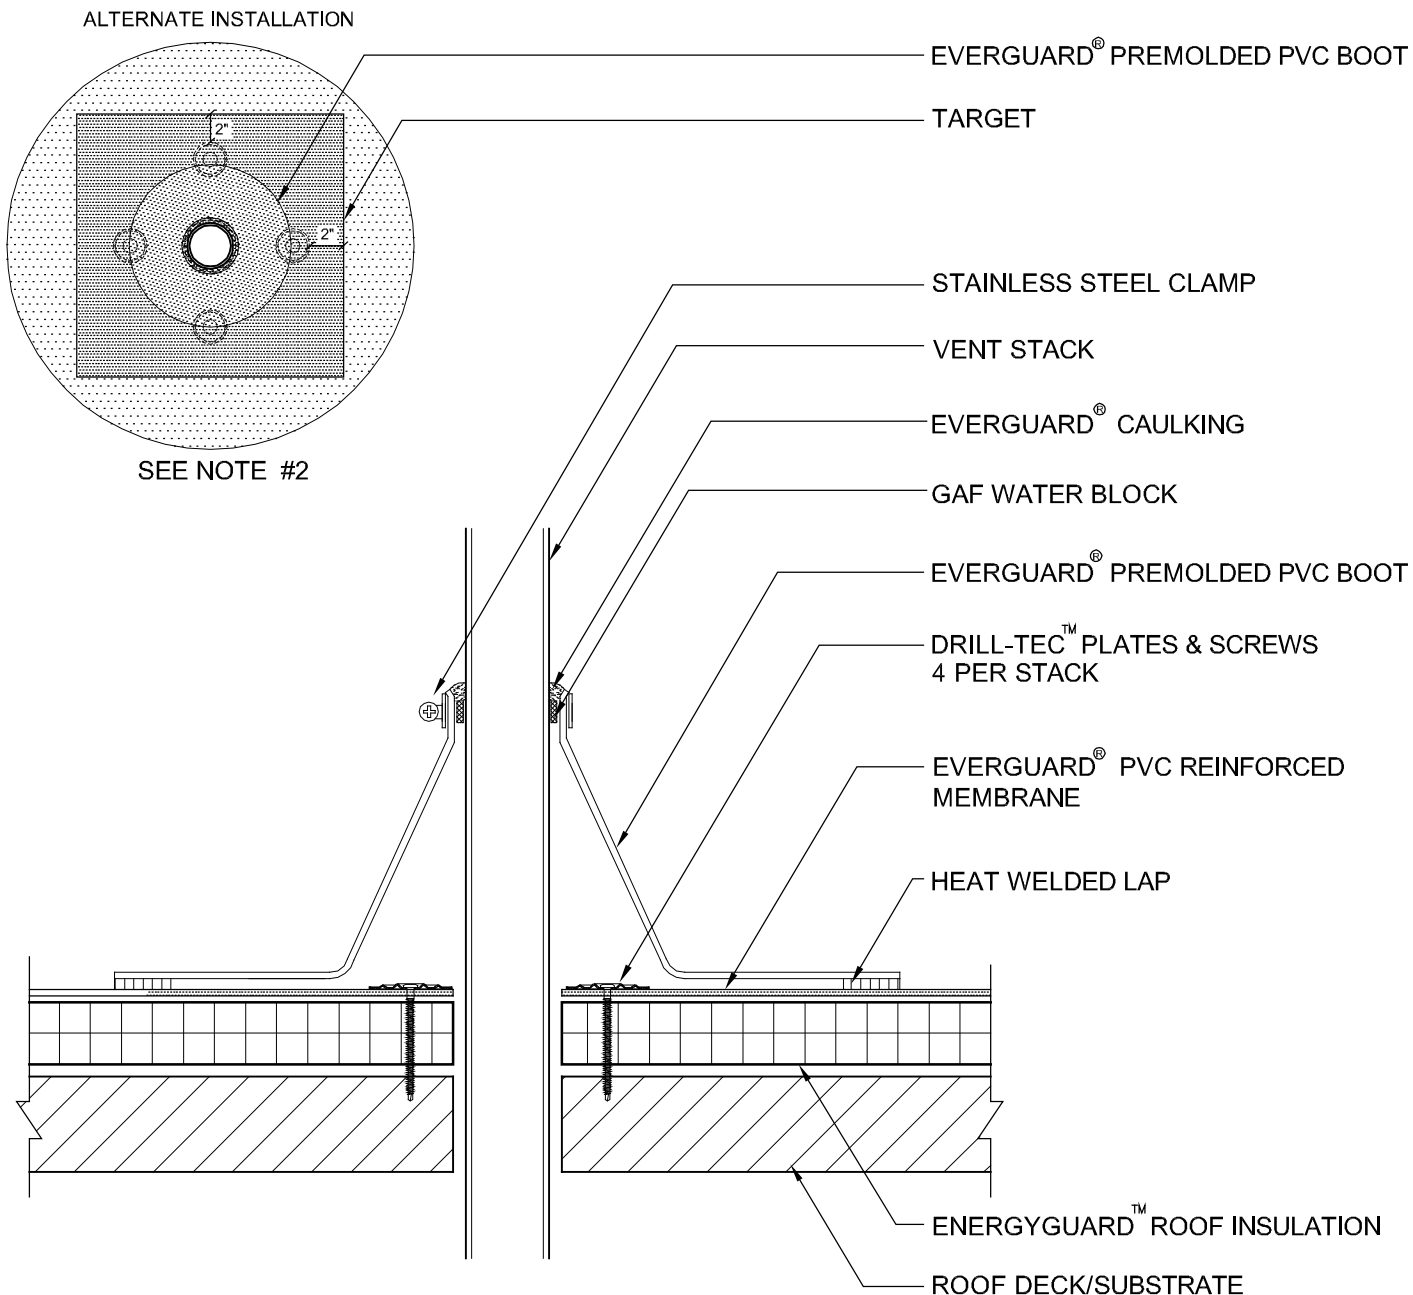

**NOTE:**

1. IF THE PLATES AND FASTENERS INTRUDE INTO BOOT FLANGE AREA, THEN A TARGET MUST FIRST BE INSTALLED OVER PLATES AND FASTENERS BEFORE BOOT INSTALLATION.
2. APPLY EVERGUARD® PVC CUT EDGE SEALANT TO ALL CUT REINFORCED PVC EDGES OF TARGET IF USED ( REFER TO DETAIL MA/FA/BA 115 ).



**EverGuard**  
SINGLE-PLY ROOFING SYSTEMS

ROOF PENETRATION SERIES

**PREMOLDED PENETRATION FLASHING**

PVC ONLY

DRAWING #  
**506B**

SCALE  
N.T.S.

SYSTEM  
**MA/FA/BA**

ISSUE/ REVISION DATE  
4-01-09