


EverGuard®
Drain PreTarget
MA/FA/BA 519

Diagram

Updated: 4/09



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

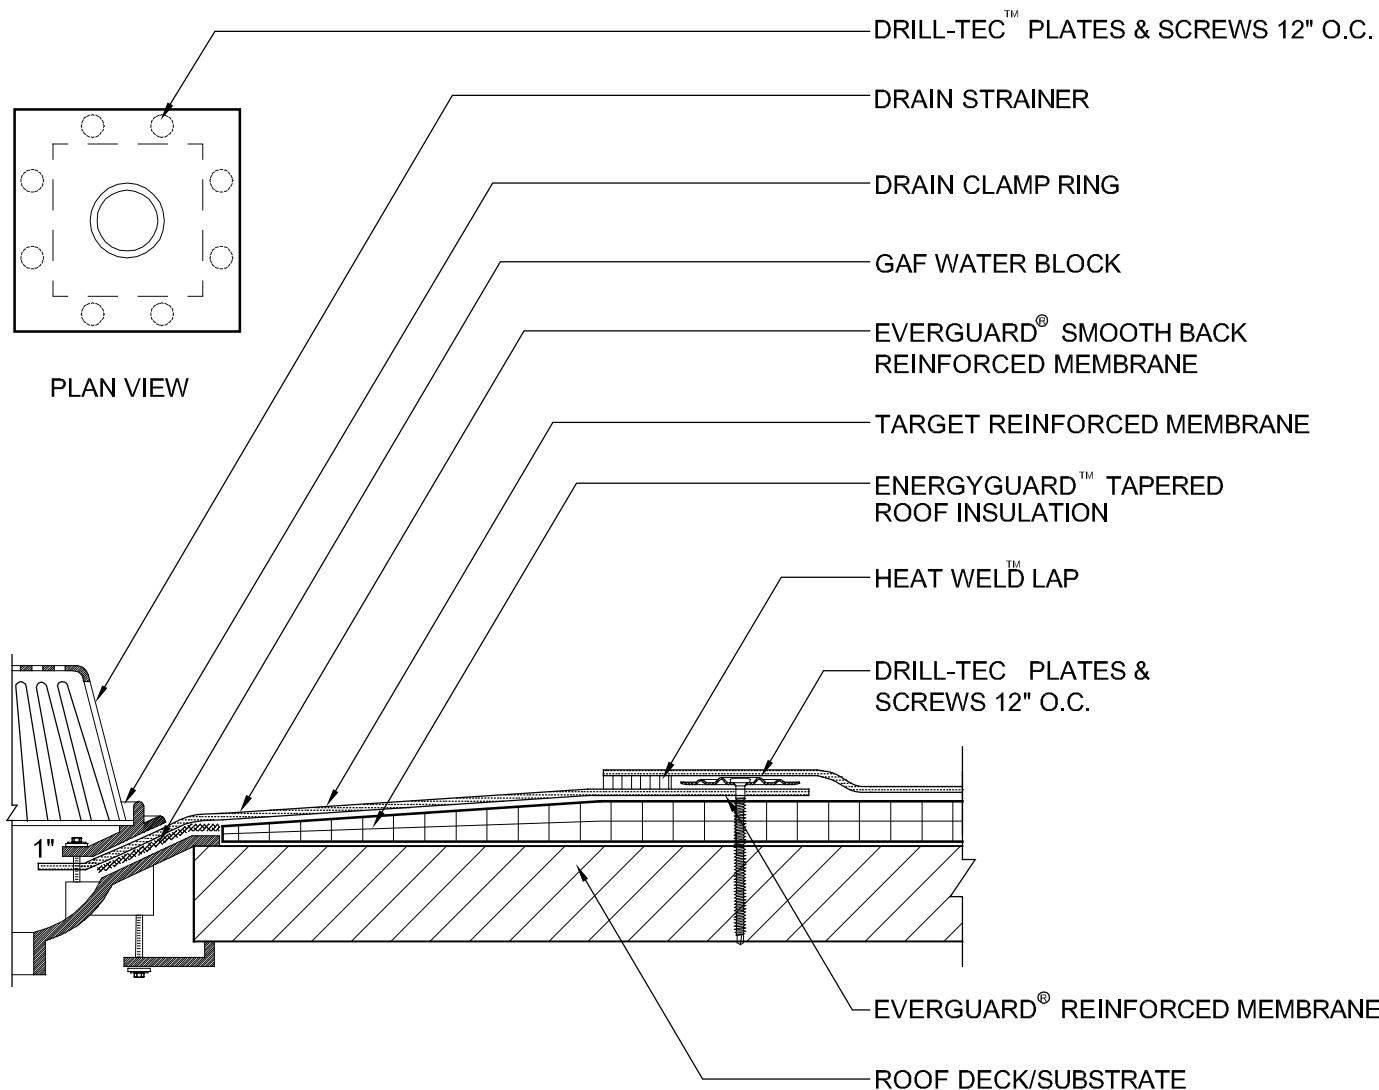

NOTE:

1. A FIELD WELD CANNOT PASS WITHIN 9" OF THE CLAMPING , OR WITHIN THE DRAIN SUMP ITSELF.
2. MEMBRANE MUST EXTEND MINIMUM 1" BEYOND THE BOLT HOLES, THE CLAMPING RING BOLTS MUST PENETRATE THE MEMBRANE..
3. TAPERED INSULATION TO CREATE A ROOF SUMP MINIMUM 36" X 36" IN SIZE (OPTIONAL).
4. EVERGUARD® ADHESIVE/ASPHALT (NOT SHOWN) REQ'D FOR FA SYSTEMS.
5. IF ASPHALT OR ASPHALTIC PRODUCT IS PRESENT , ADD SEPERATION SHEET.
6. DO NOT RUN SEPERATION SHEET INTO BOWL AREA IF USED IN SYSTEM.
7. APPLY EVERGUARD® TPO AND PVC CUT EDGE SEALANT TO ALL CUT REINFORCED TPO AND PVC EDGES (REFER TO DETAIL MA/FA/BA 115).



ROOF PENETRATION SERIES

DRAIN - PRE TARGET

DRAWING #

519

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

4-01-09