


EverGuard®
Penetration Pocket
MA/FA/BA 522

Diagram

Updated: 4/09



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

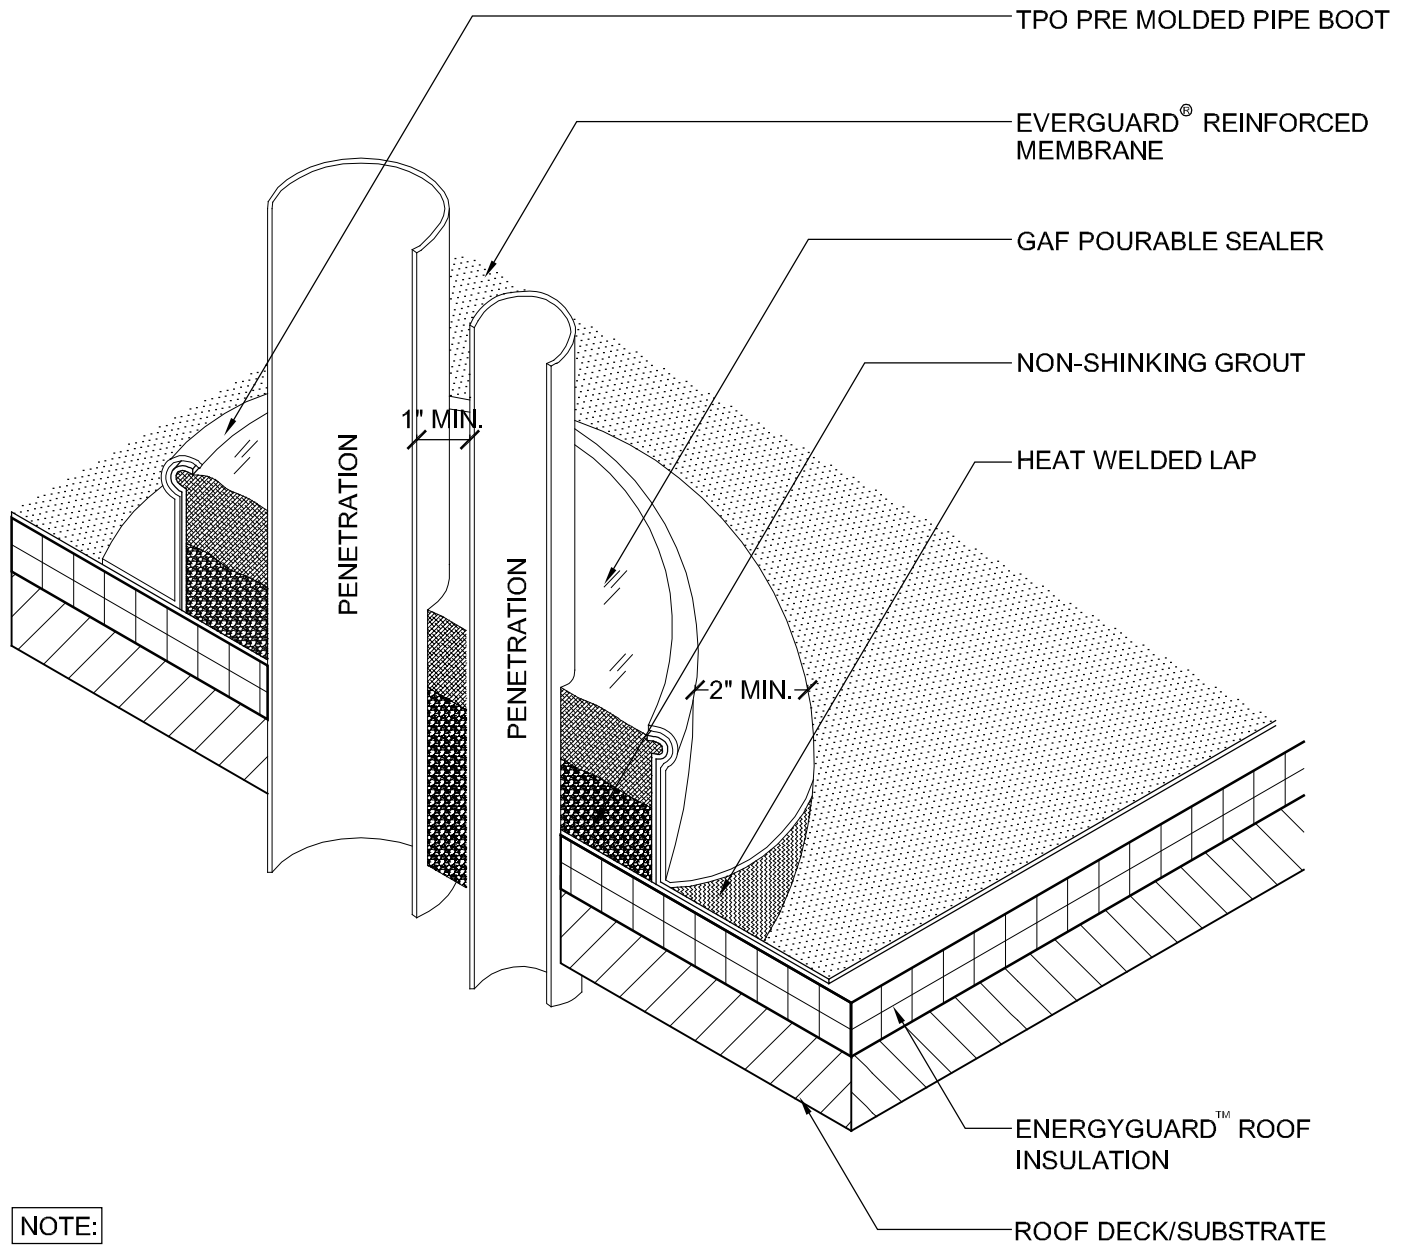

NOTE:

1. STONE/PAVER BALLAST (NOT SHOWN) REQUIRED FOR BA SYSTEMS
2. EXISTING PROJECTION MUST BE CLEANED AND FREE OF INSULATING MATERIALS .
3. POURABLE SEALER MOUNTED TO SHED WATER (MAX 2" DEPTH), REMAINDER OF POCKET MAY BE FILLED WITH A NON-SHRINKING GROUT.
4. DO NOT USE OVER EXISTING PENETRATION POCKETS.
5. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 140°F.
6. TPO PRIMER REQ. ON PENETRATIONS AND MEMBRANE INSIDE OF PENETRATION POCKET.
7. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL MA/FA/BA 115).



ROOF PENETRATION SERIES

PENETRATION POCKET

DRAWING #

522

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

4-01-09