


EverGuard®  
Split Pipe Boot  
MA/FA/BA 524

Diagram

Updated: 4/09



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

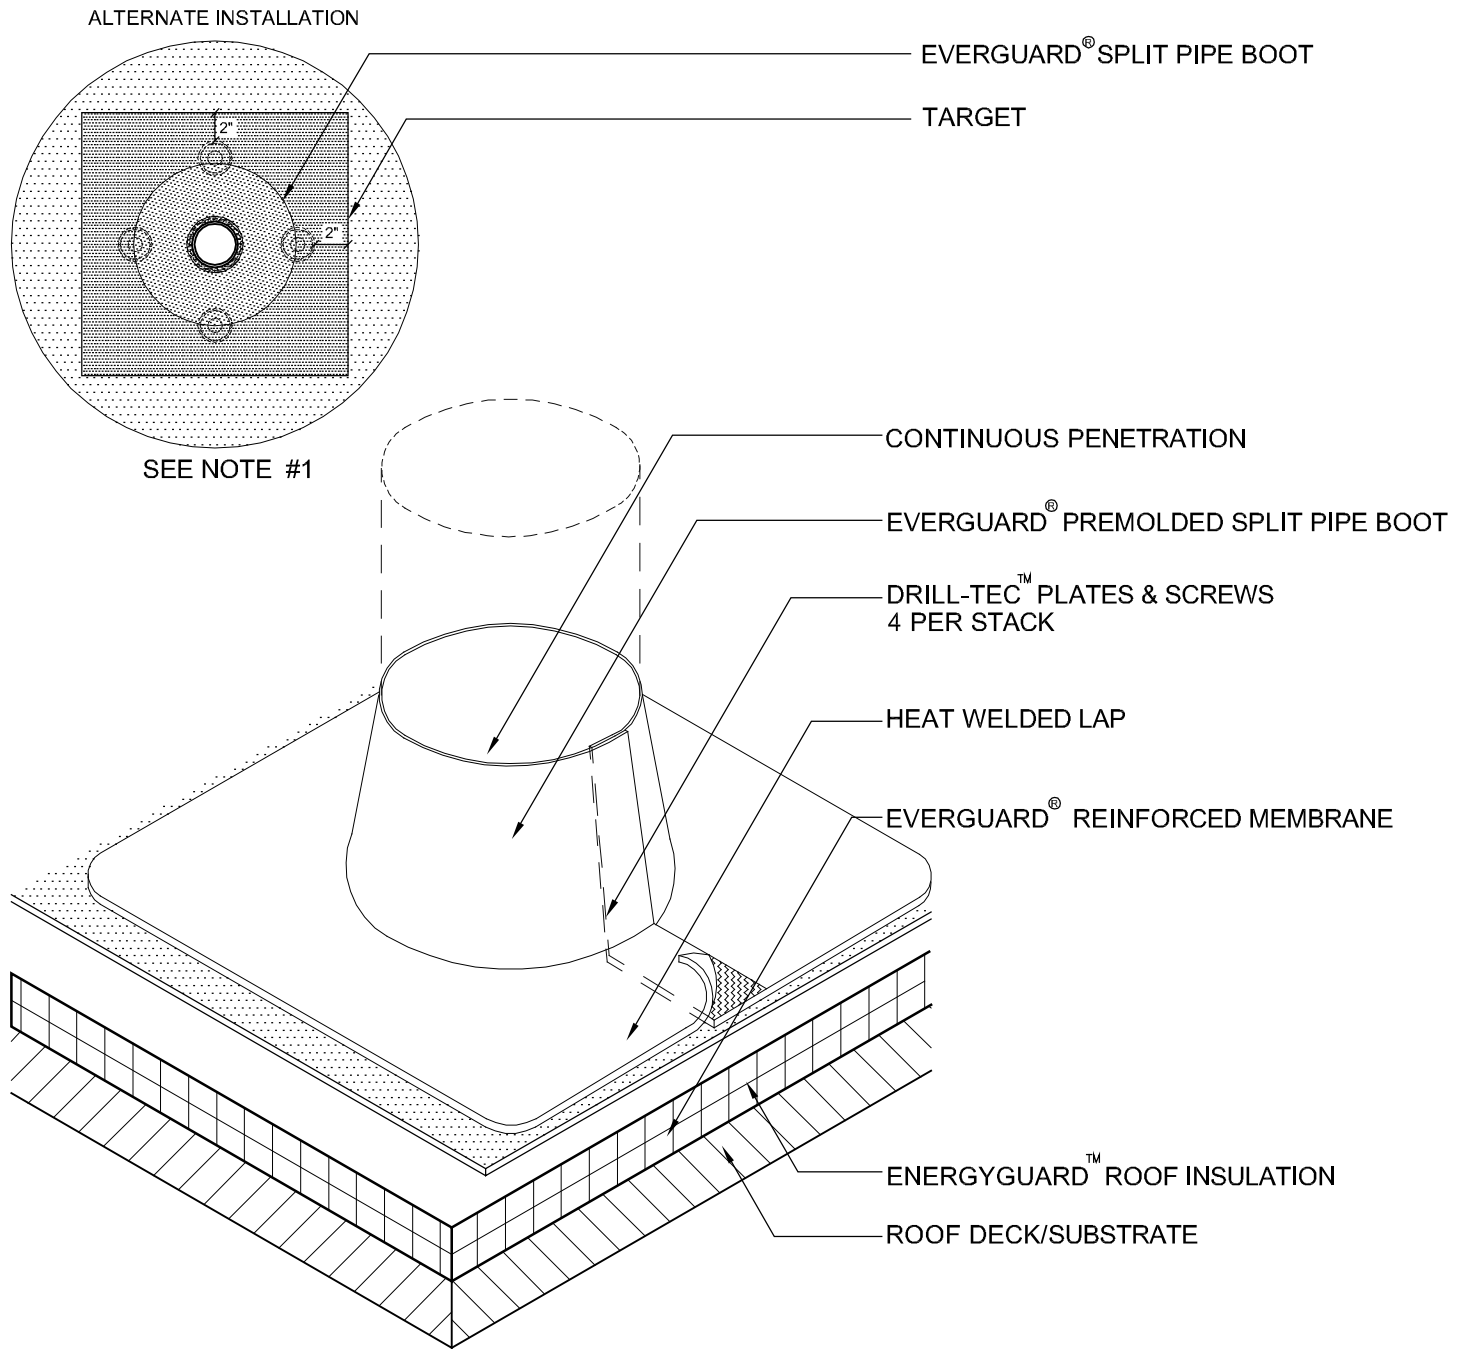

**NOTE:**

1. IF THE PLATES AND FASTENERS INTRUDE INTO BOOT FLANGE AREA, THEN A TARGET MUST FIRST BE INSTALLED OVER PLATES AND FASTENERS BEFORE BOOT INSTALLATION.
2. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL MA/FA/BA 115).



ROOF PENETRATION SERIES

**SPLIT PIPE BOOT**

TPO ONLY

DRAWING #

524

SCALE

N.T.S.

SYSTEM

MA/FA/BA

ISSUE/ REVISION DATE

4-01-09