

Freedom™
Roof Membrane Layout
FD 101

Diagram


Updated: 11/06



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

REFERENCE EVERGUARD® PARAPET WALL BASE FLASHING

TYPICAL EVERGUARD® FREEDOM MEMBRANE

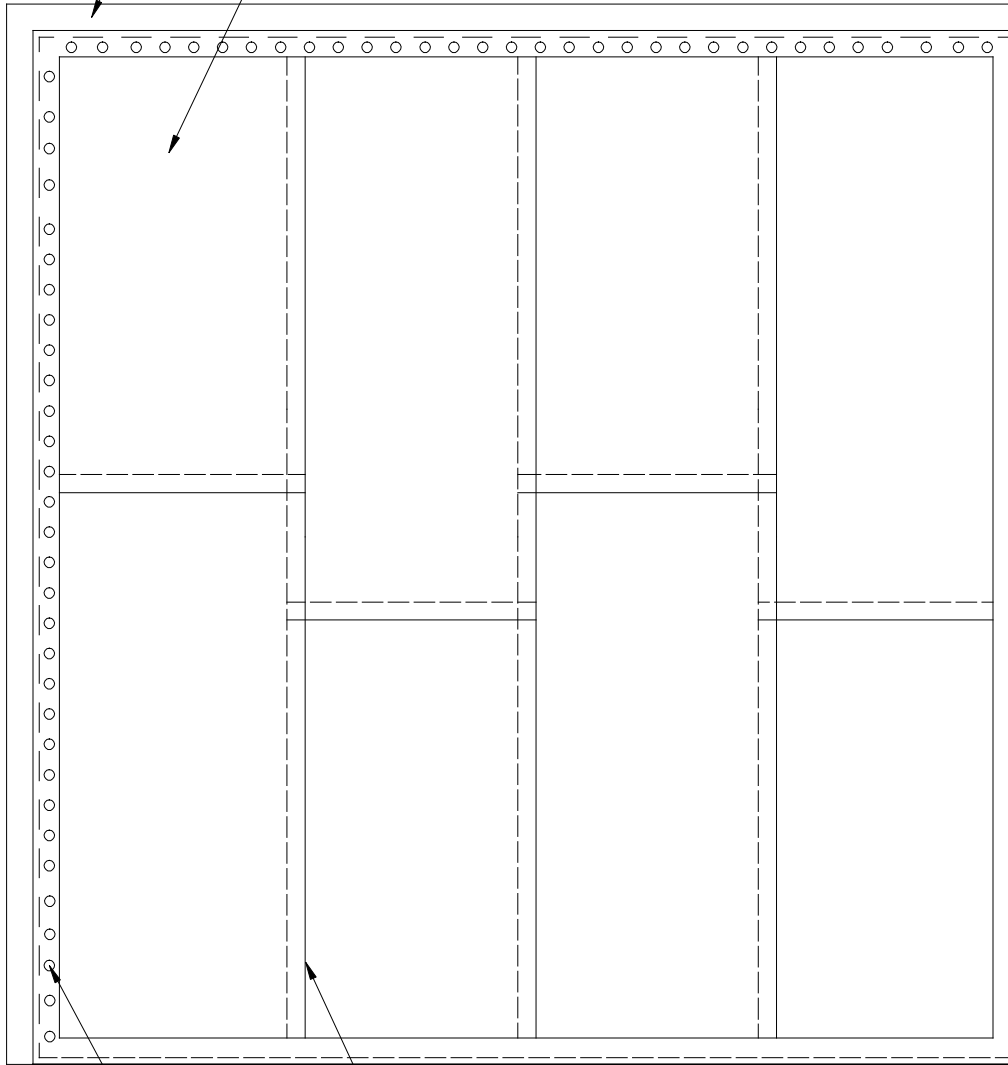

ALTERNATE

HEAT WELD OR RAPID SEAMS

EVERGUARD® COATED
METAL EDGE

DRILL-TEC™ PLATES & SCREWS

NOTE:

1. SEE EVERGUARD® MECHANICALLY ATTACHED SYSTEM GUIDELINES TO DETERMINE FASTENER SPACING FOR VARIOUS DECK TYPES AND WIND UPLIFT REQUIREMENTS.
2. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL FD 115) AND ALL RS SEAMS.
3. REFER TO T-JOINT DETAIL FD 105



ROOF MEMBRANE LAYOUT

FREEDOM HW & RS

DRAWING #

FD 101

SCALE
N.T.S.

ISSUE/ REVISION DATE
11-01-06