


EverGuard®  
T-Joint Detail Corner  
MA/FA/BA 216

Diagram

Updated: 11/06



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

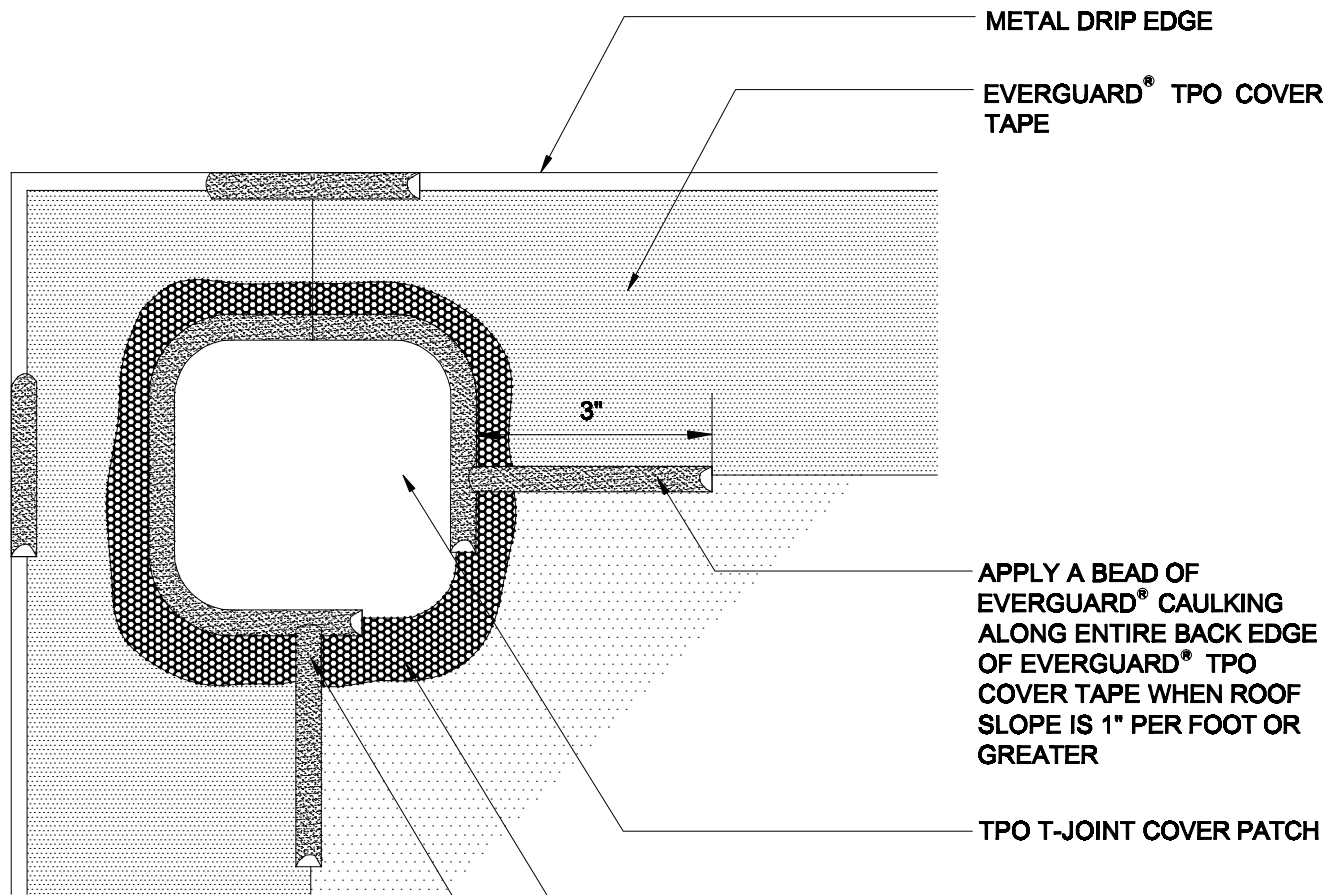

METAL DRIP EDGE

EVERGUARD® TPO COVER TAPE

3"

APPLY A BEAD OF EVERGUARD® CAULKING ALONG ENTIRE BACK EDGE OF EVERGUARD® TPO COVER TAPE WHEN ROOF SLOPE IS 1" PER FOOT OR GREATER

TPO T-JOINT COVER PATCH

EVERGUARD® PRIMER

APPLY A BEAD OF EVERGUARD® CAULKING AROUND ENTIRE PERIMETER OF TPO COVER TAPE & EXTEND 3" BEYOND PATCH AT ALL SEAMS