

Freedom™  
Alternate Wall Base Termination  
FD 307


Diagram

Updated: 11/06



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

**RS MAX 10 YR WARRANTY**

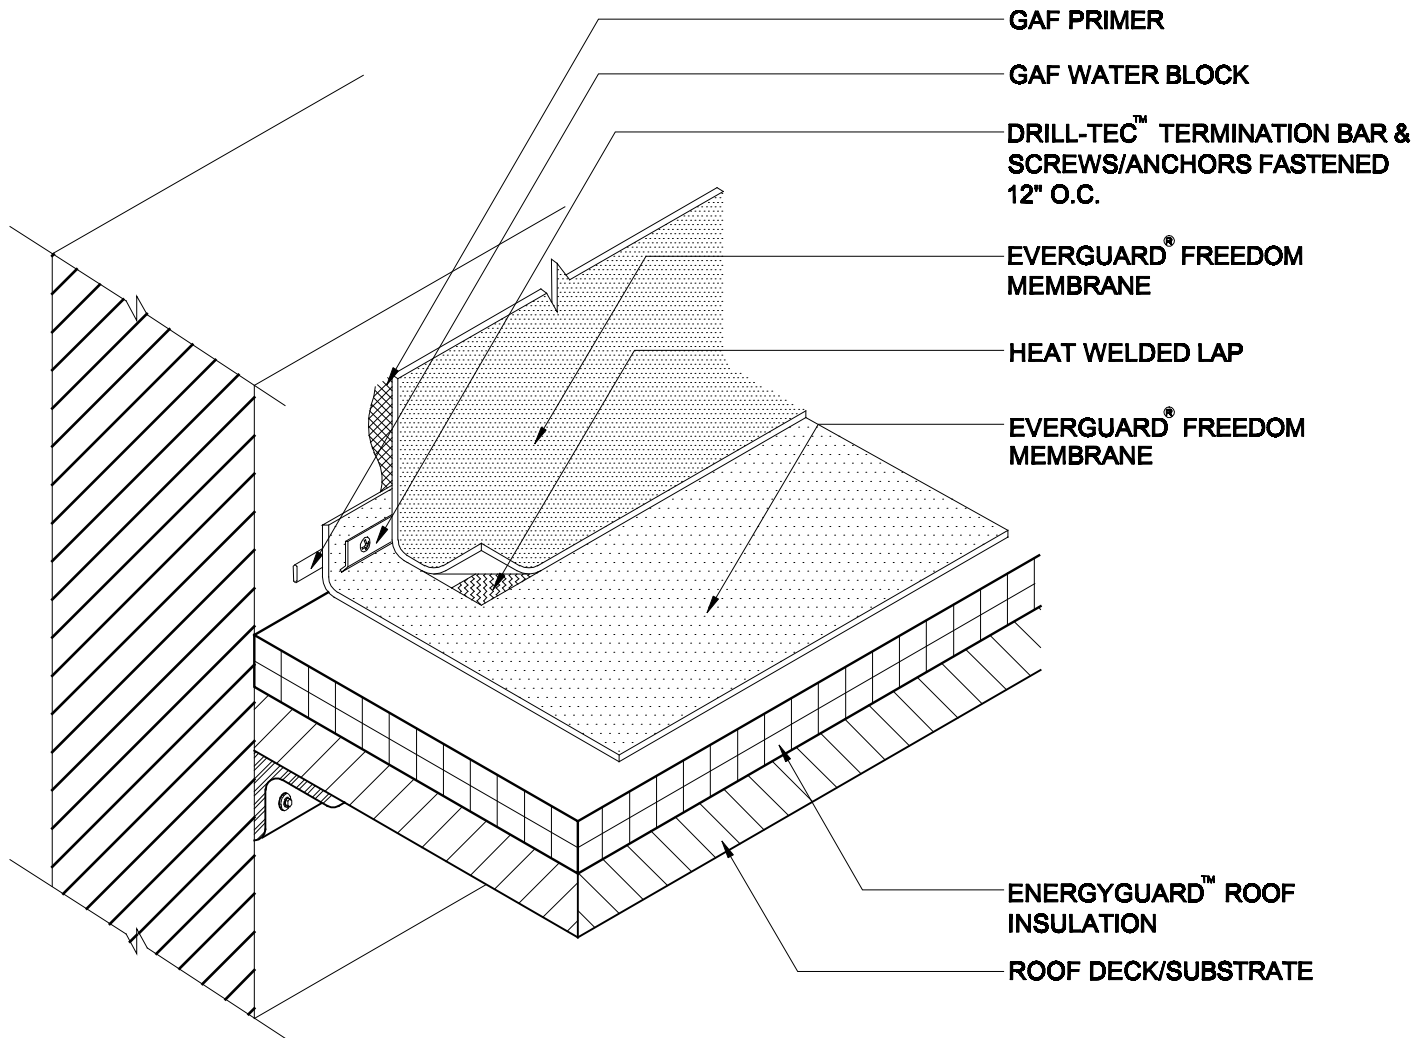

**NOTE:**

1. PLATES & FASTENERS MAY BE USED IN LIEU OF TERM BAR IN NON-PRESSURIZED SITUATIONS.
2. THIS DETAIL TO BE USED FOR PRESSURIZED SITUATIONS.
3. TO MAKE A SEAM ON RS WITHOUT RS PRESENT, YOU MUST USE GAF CLEANER AS WELL AS GAF PRIMER TO PREP THE AREA.
4. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES ( REFER TO DETAIL FD 115 ) AND ALL RS SEAMS.



**ALTERNATE WALL BASE TERMINATION**

**FREEDOM HW & RS**

**DRAWING #**

**FD 307**

**SCALE**  
N.T.S.

**ISSUE/ REVISION DATE**  
11-01-06