


Freedom™
Coated Metal Joint Detail
FD 310

Diagram

Updated: 11/06




*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

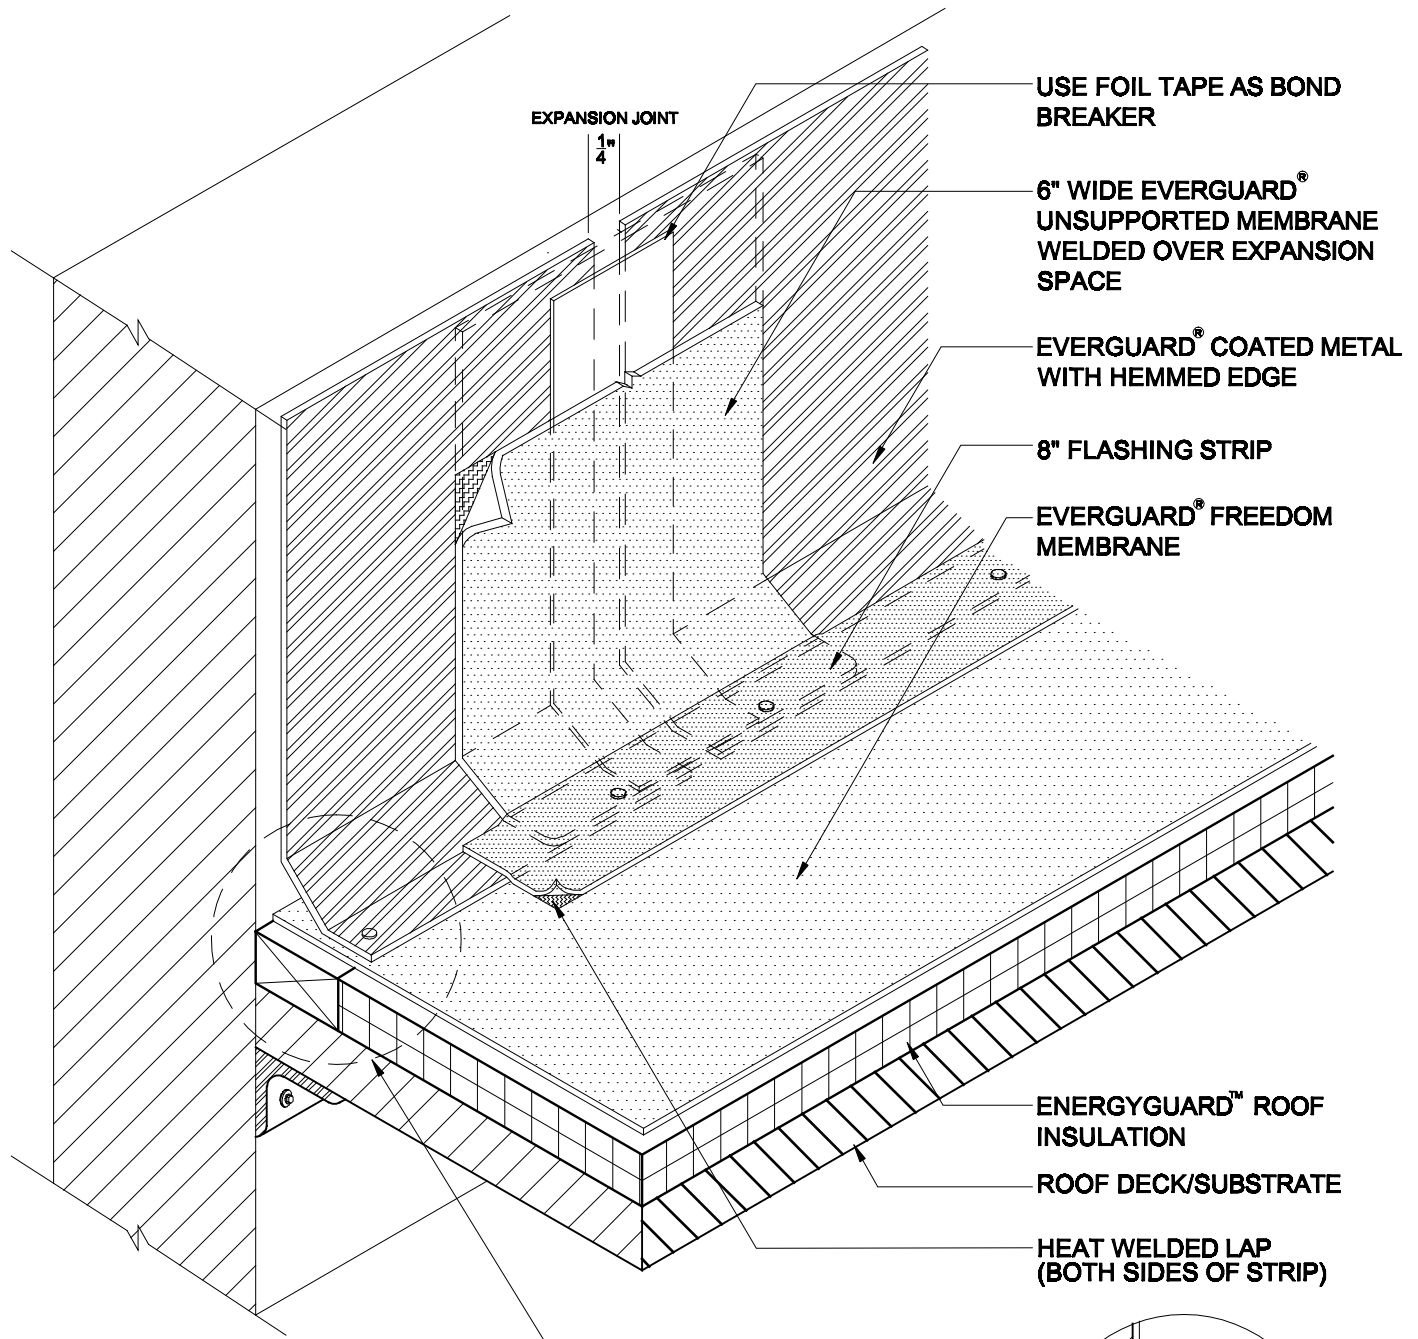

NOTE:

1. T-JOINTS MUST BE USED AT THE INTERSECTIONS OF 8" FLASHING STRIP AND UNREINFORCED MEMBRANE.
2. DETAIL TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATION CONTAINING REQUIREMENTS FOR NAILERS, INSULATION ETC.
3. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL FD 115).

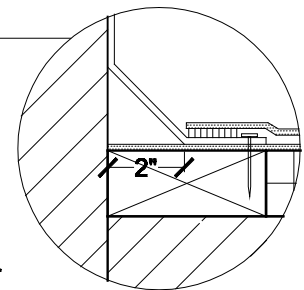

COATED METAL JOINT DETAIL

FREEDOM HW ONLY

DRAWING #

FD 310

SCALE
N.T.S.

ISSUE/ REVISION DATE
11-01-06