


Freedom™
Field-Wrapped Penetration Flashing
FD 507

Diagram


Updated: 11/06



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

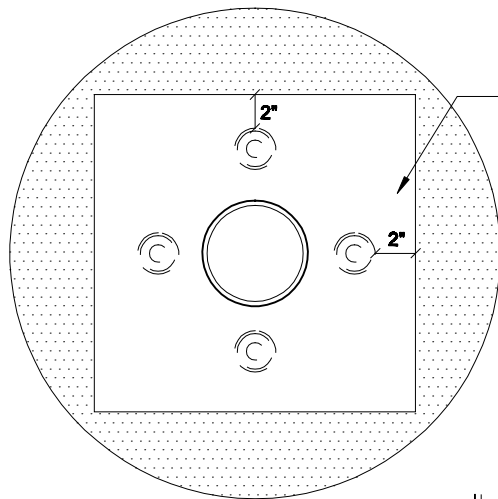

PLAN VIEW

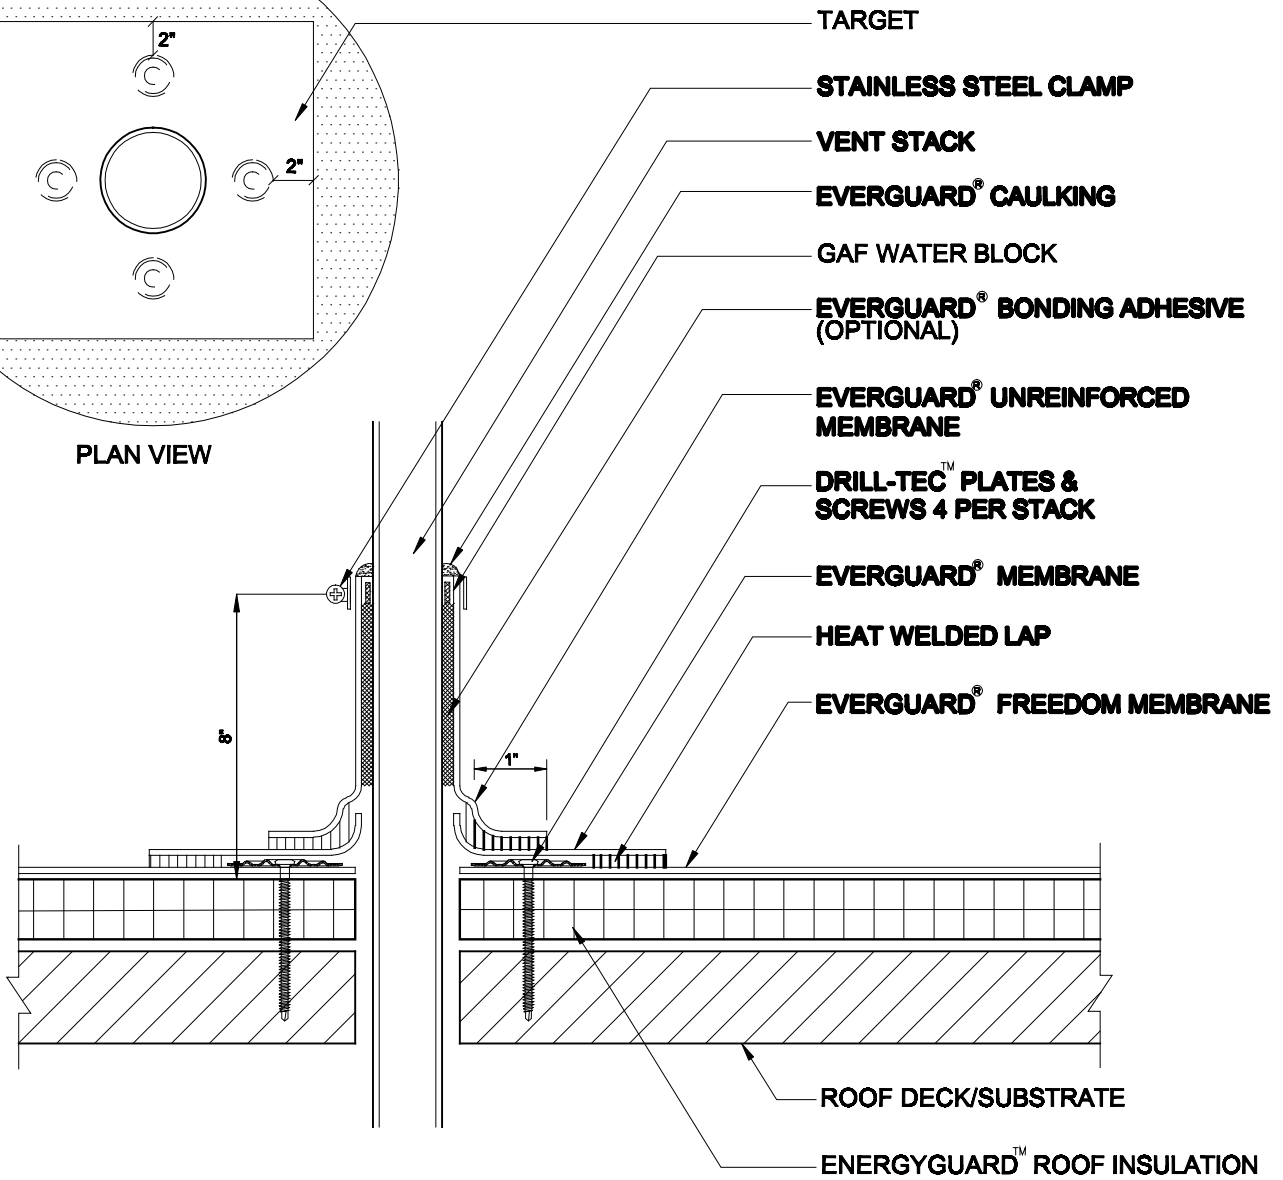

NOTE:

1. IF TARGET MEMBRANE MUST BE SPLIT TO FIT AROUND STACK, A MIN. 4" WIDE EVERGUARD® FLASHING STRIP MUST BE HEAT WELDED OVER SPLIT.
2. APPLY HEAT TO UNREINFORCED FLASHING AND FORM BY HAND PRIOR TO HOT AIR WELDING.
3. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO DETAIL FD 115) IF APPLICABLE.



FIELD-WRAPPED PENETRATION FLASHING

FREEDOM HW ONLY

DRAWING #

FD 507

SCALE
N.T.S.

ISSUE/ REVISION DATE
11-01-06