

Freedom™  
Adhered Looped Lightning  
Suppression Mounting  
FD 605

Diagram

Updated: 11/06





*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

**EVERGUARD® FREEDOM  
MEMBRANE**

**ROUNDED CORNER OF A  
REINFORCED 6"X6" PATCH  
(OPTION 1)**

**DETAIL IS NOT GUARANTEED**

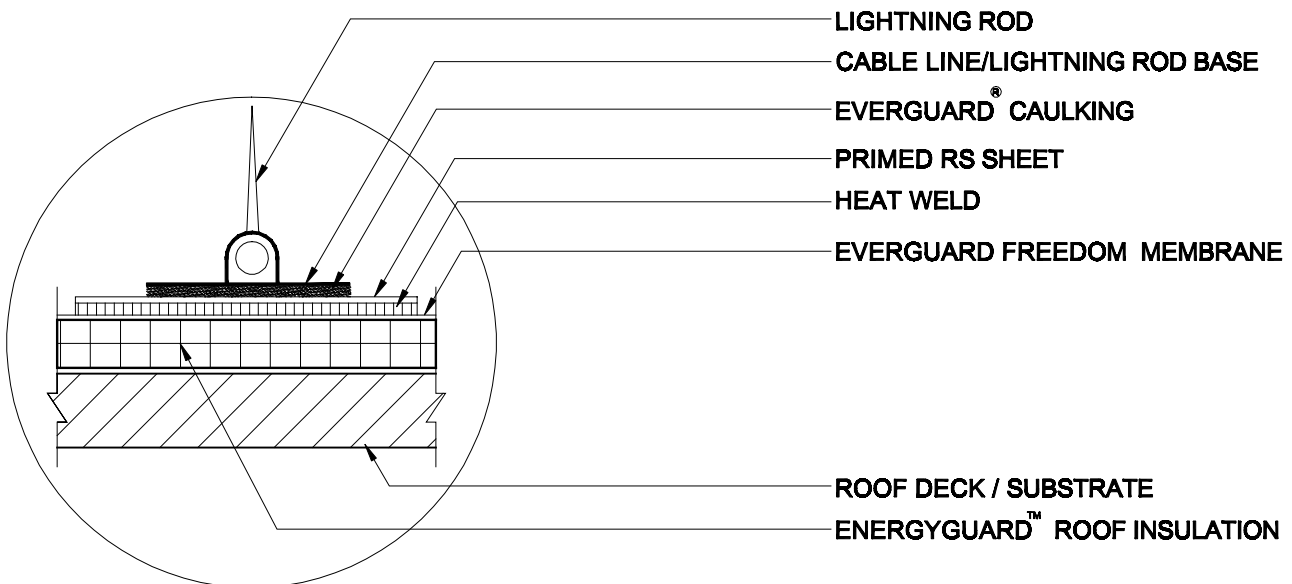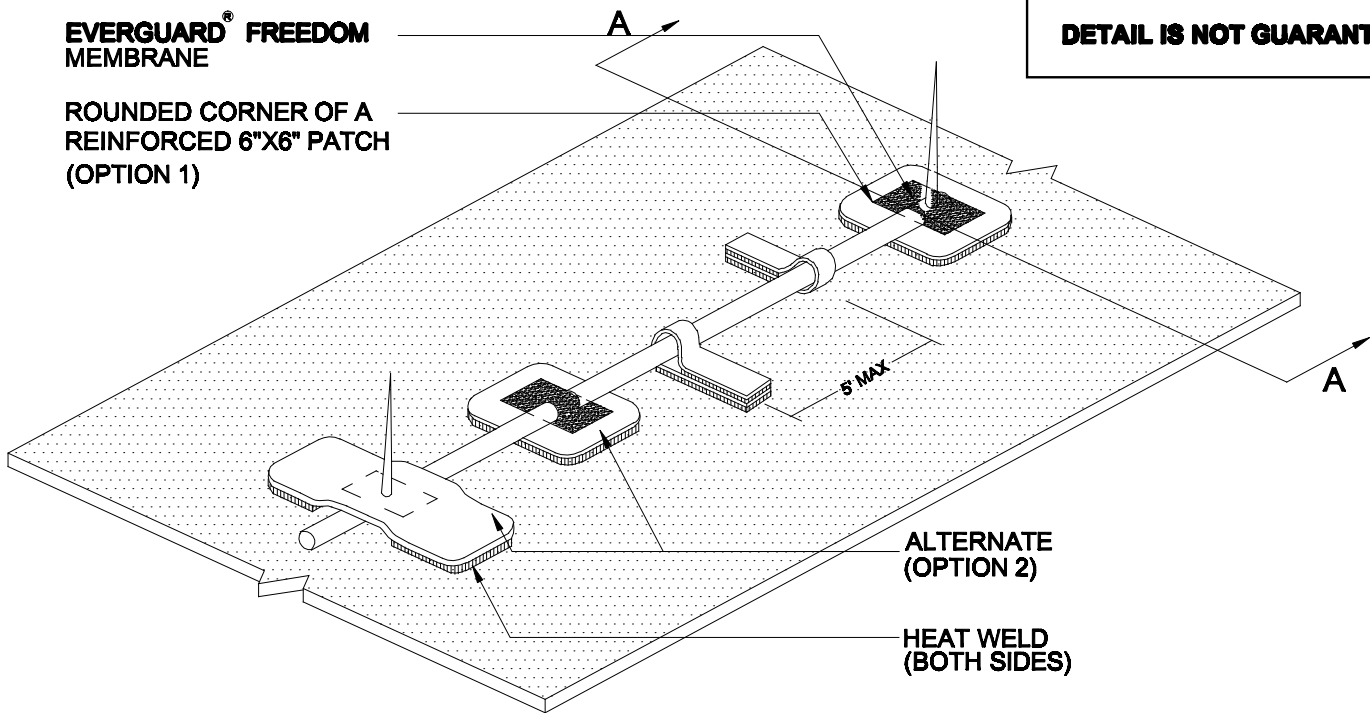

**SECTION A**

**NOTE:**

1. FOR OPTION 1: WHEN ATTACHING METAL PLATE TO 6"X6" PATCH, PRIME THE PATCH AT THE EVERGUARD® GUN GRADE CAULKING TO THE EVERGUARD® TPO PRIMER AND EMBED THE PLATE INTO THE CAULK.
2. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES ( REFER TO DETAIL FD 115).
3. TO MAKE A SEAM ON RS WITHOUT RS PRESENT, YOU MUST USE GAF CLEANER AS WELL AS GAF PRIMER TO PREP THE AREA.



**ADHERED LOOPED LIGHTNING  
SUPPRESSION MOUNTING**

**FREEDOM RS ONLY**

DRAWING #

**FD 605**

SCALE  
N.T.S.

ISSUE/ REVISION DATE  
11-01-06