


Freedom™  
Shingle to Flat Roof  
Transition at Rake  
FD 610

Diagram

Updated: 11/06



*Quality You Can Trust Since 1886...  
From North America's Largest Roofing Manufacturer™*

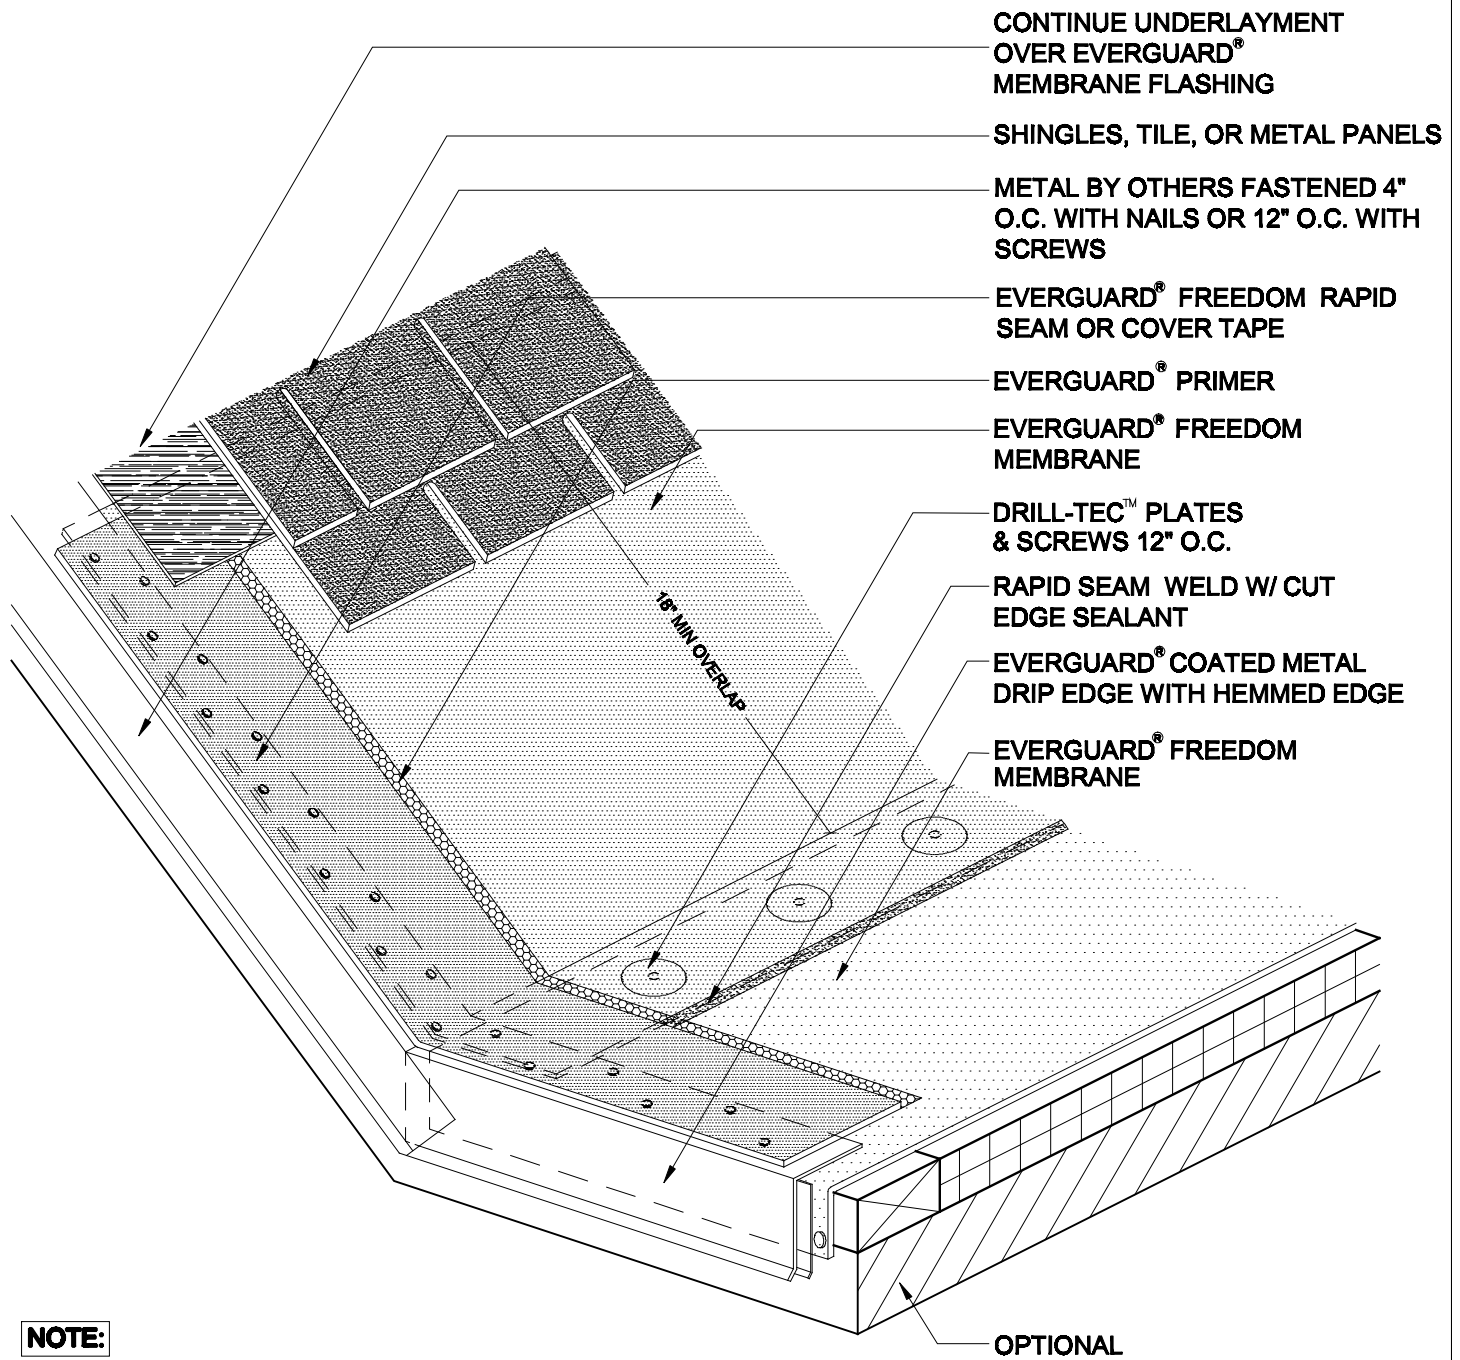

**NOTE:**

1. MINIMUM SLOPE IS 2:12.
2. FOR INSULATION THICKNESS GREATER THAN 8" CONTACT GAFMC CONTRACTOR SERVICES FOR ALTERNATE MEMBRANE ATTACHMENT REQUIREMENTS.
3. TO MAKE A SEAM ON RS WITHOUT RS PRESENT, YOU MUST USE GAF CLEANER AS WELL AS GAF PRIMER TO PREP THE AREA.
4. WHEN FIELD FABRICATING EDGE METAL; MINIMUM DIMENSIONS SHALL BE 3" HORIZONTAL & 4" VERTICLE.
5. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL RAPIDSEAM EDGES ( REFER TO DETAIL FD 115 ).



**SHINGLE TO FLAT ROOF TRANSITION  
 AT RAKE**

**FREEDOM RS ONLY**

**DRAWING #  
 FD 610**

<b>SCALE</b> N.T.S.	<b>ISSUE/ REVISION DATE</b> 11-01-06
------------------------	---