


Ruberoid®
Wood Deck Panel Surfacing
MB/PD 113

Diagram

Updated: 1/08



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

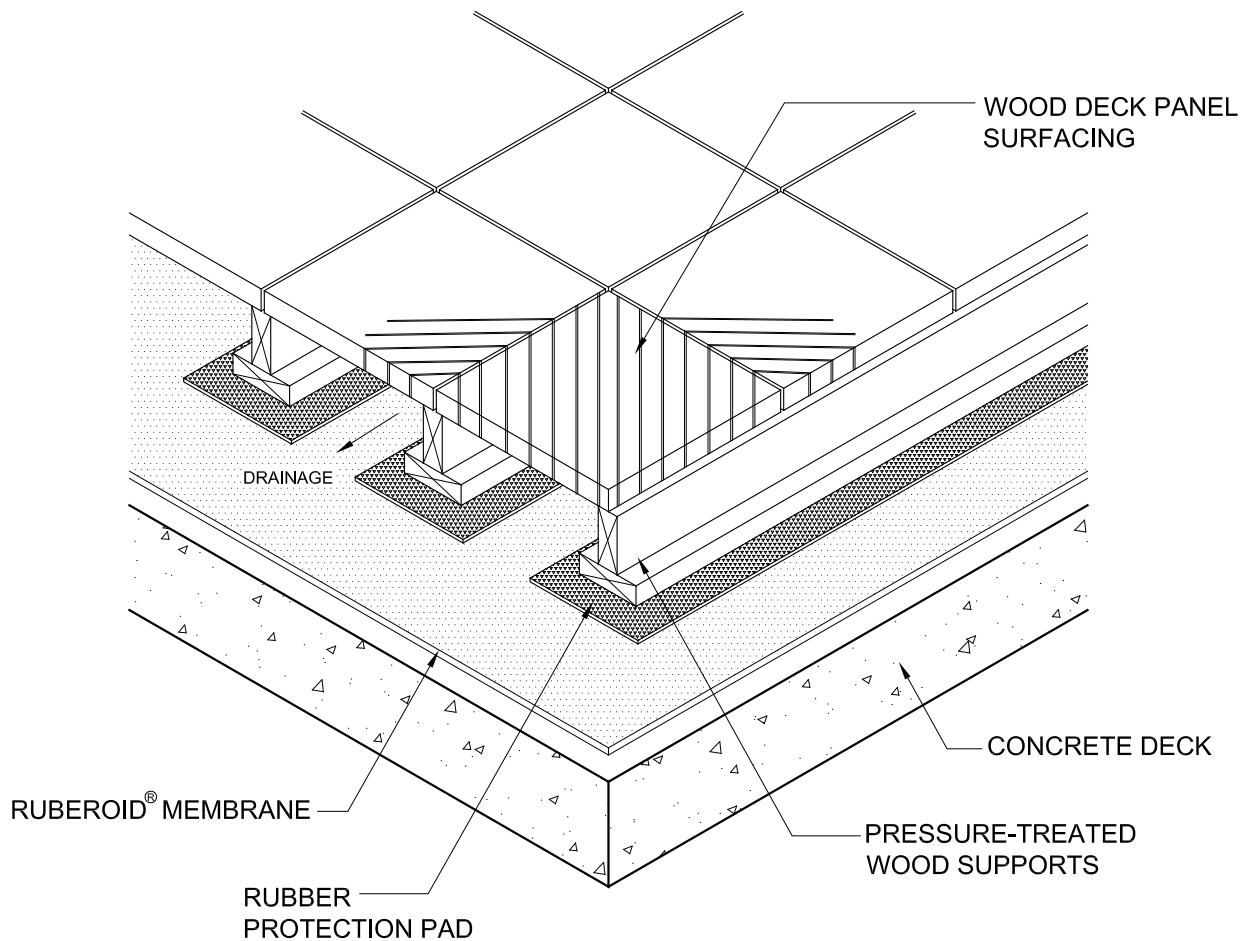

NOTE:

1. ALL WOOD SUPPORTS SHOULD BE OF NOMINAL 2" STOCK.
2. THE RUBBER PROTECTION PAD SHOULD EXTEND A MINIMUM OF 2" BEYOND THE WOOD SUPPORTS.
3. CLIPPING OR PINNING THE DECK PANELS TOGETHER SHOULD BE CONSIDERED AS A METHOD OF ACHIEVING AN EVEN SURFACE.



WOOD DECK PANEL SURFACING

DRAWING #

MB/PD 113

SCALE

N.T.S.

ISSUE/ REVISION DATE

01-01-08