


Ruberoid®
Rubber Playtile Surfacing
MB/PD 114

Diagram

Updated: 1/08



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

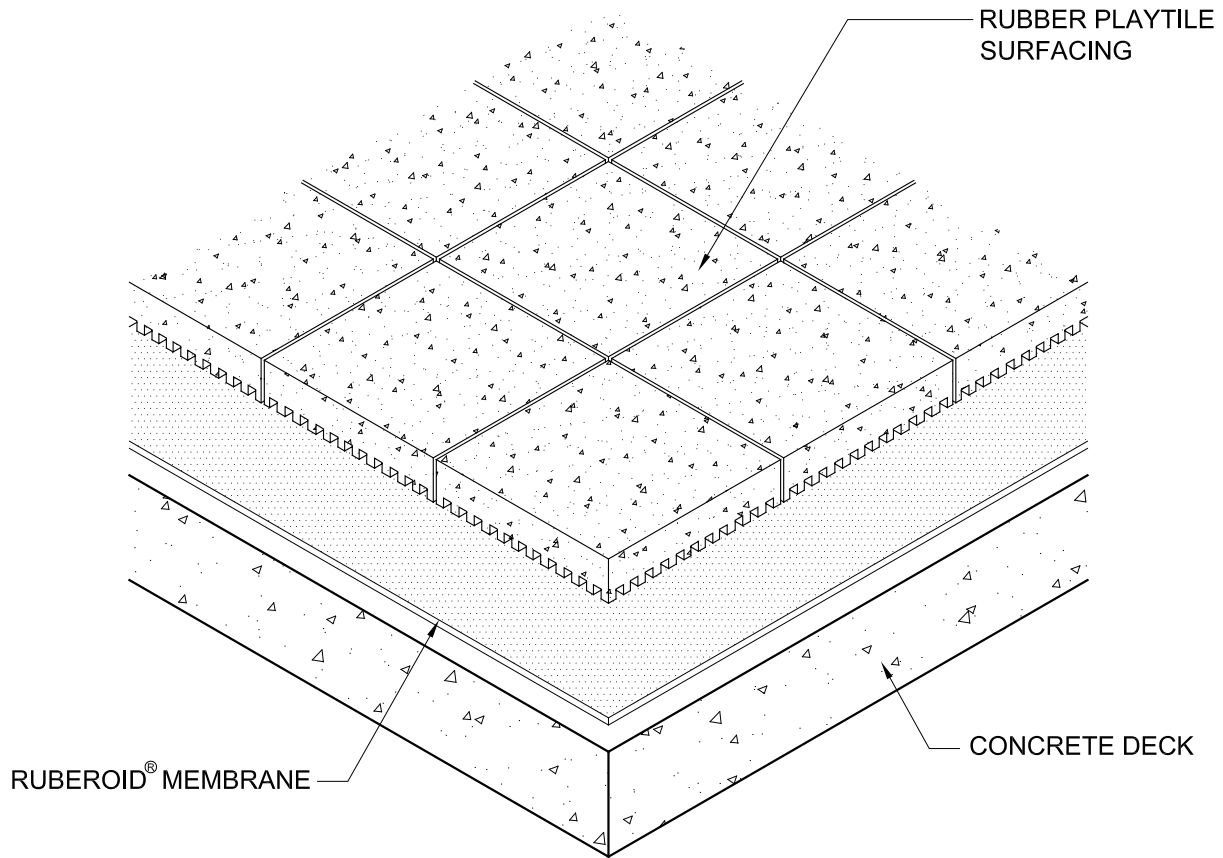

NOTE:

1. RUBBER PLAYTILES MUST INCLUDE DRAINAGE CHANNELS ON THEIR UNDERSIDE. OTHERWISE, A GEOTEXTILE DRAIN BOARD MUST BE INSTALLED OVER THE RUBEROID MEMBRANE PRIOR TO THE INSTALLATION OF THE PLAYTILES.
2. CLIPPING OR PINNING THE PLAYTILES TOGETHER SHOULD BE CONSIDERED AS A METHOD OF ACHIEVING AN EVEN SURFACE.