


TopCoat® Curb Skylight

Diagram



*Quality You Can Trust Since 1886...
From North America's Largest Roofing Manufacturer™*

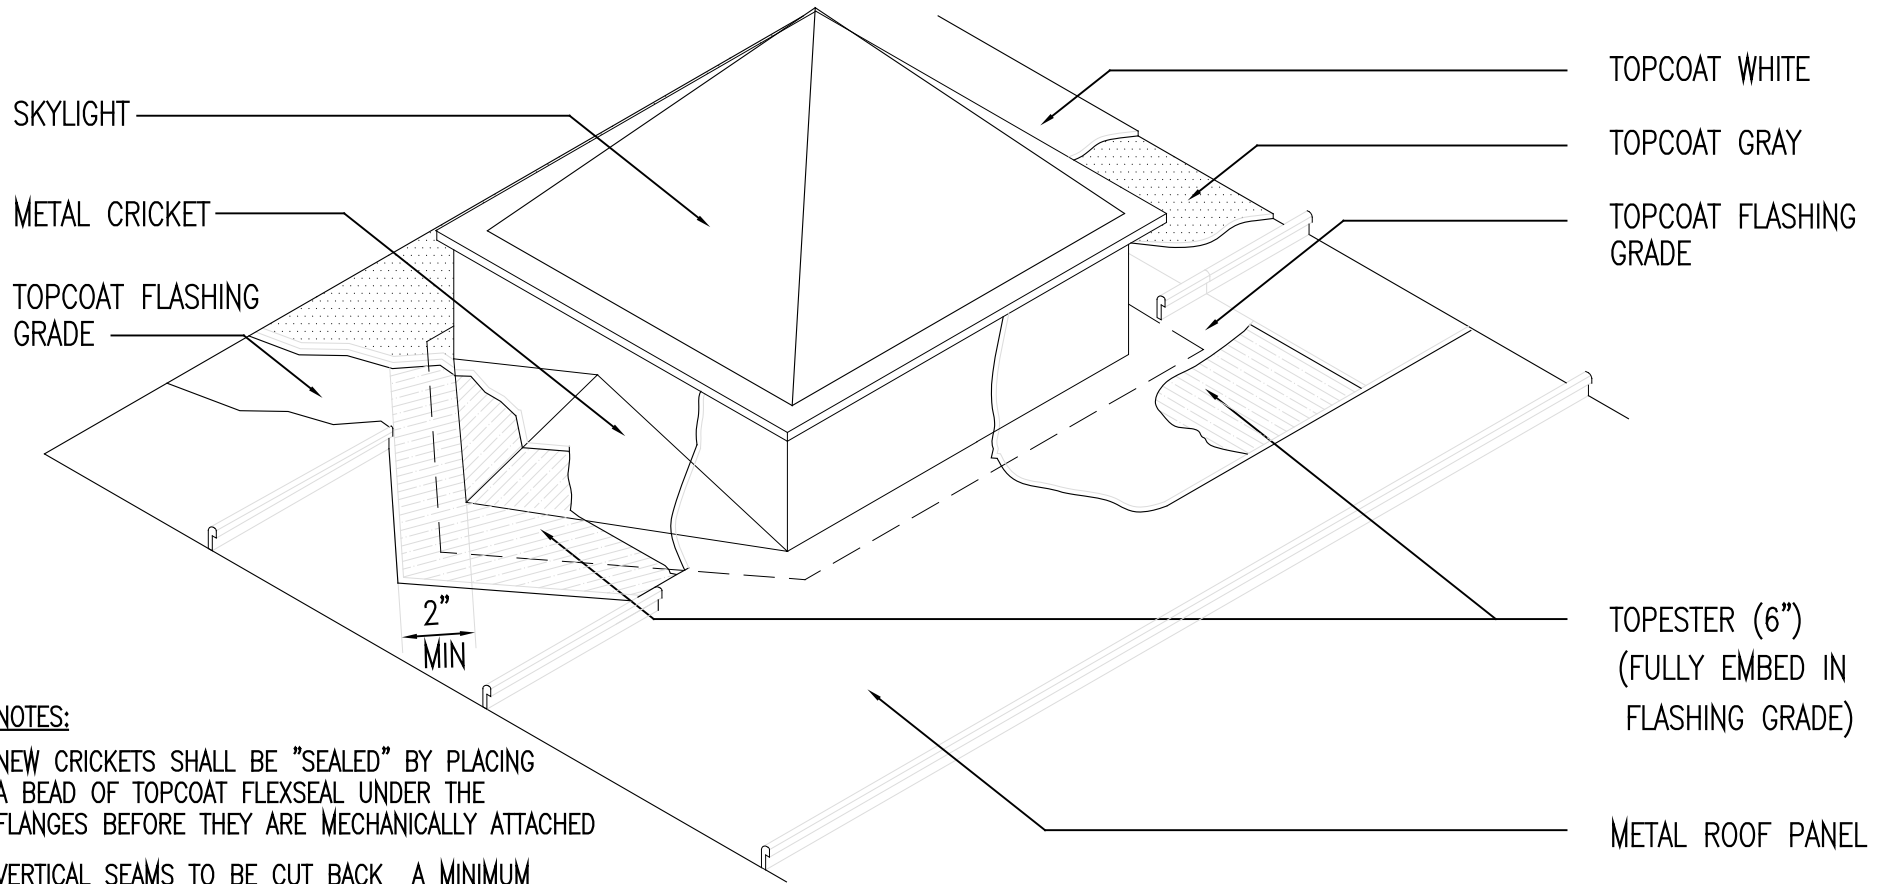

NOTES:

1. NEW CRICKETS SHALL BE "SEALED" BY PLACING A BEAD OF TOPCOAT FLEXSEAL UNDER THE FLANGES BEFORE THEY ARE MECHANICALLY ATTACHED
2. VERTICAL SEAMS TO BE CUT BACK A MINIMUM OF 2" FROM CRICKET

CURB SKYLIGHT

NO SCALE